

INSTRUCTION MANUAL VACUUM KIT FOR MODEL SR-30 & SR30 V



3067589

ETL Listed Mark - Canada/United States

Conforms to UL2208
Certified to CSA C22.2 No. 30

- **Warranty**
- **Safety**
- **Operation**
- **Service Parts**
- **Accessory Information**
- **Registration Form**



TABLE OF CONTENTS

	<u>PAGE</u>
WARRANTY INFORMATION	3
SOLVENT RECYCLER SPECIFICATIONS	4
SAFETY AND WARNING	5
General Safety	5
Danger and Warning Labels	5
General Safety Rules	6
Personal Safety	6
Unit Use and Care	7
Safety Rules	7
FLAMMABLE SOLVENTS	9
NON-FLAMMABLE CHLORINATED SOLVENTS	10
VACUUM DISTILLATION	11
Examples	12
VACUUM DISTILLATION – OPERATING PRINCIPAL DRAWING	14
OPERATING METHODS	14
INSTALLATION (At Vacuum Conditions)	15
STARTING OPERATIONS	15
VACUUM INSTALLATION	16
SPARE PARTS NUMBERS FOR VACUUM	17
IMPORTANT ADVICE	18
DEFECTS, CAUSES AND REMEDIES (Vacuum)	19
WARRANTY INFORMATION / TECHNICAL ASSISTANCE	20
WARRANTY REGISTRATION	21



IST International Surface Technologies Inc. LIMITED WARRANTY

International Surface Technologies inc. (IST) warrants all equipment listed in this manual which is manufactured by IST and bearing its name, to be free from defects in material and workmanship on the date of sale by an authorized IST distributor to the original purchaser for use. Notwithstanding any special, extended or limited warranty published by IST will, for a period of TWENTY FOUR (24) months from the date of sale, repair or replace any part of the equipment determined by IST to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with IST's written recommendations.

This warranty does not cover, and IST shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-IST component parts. Nor shall IST be liable for malfunction, damage or wear caused by the incompatibility with Becca equipment with structures, accessories, equipment or materials not supplied by IST, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by IST.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized IST distributor for verification of the claimed defect. If the claimed defect is verified, IST will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser, transportation prepaid. If the inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

IST's sole obligation and the buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought forward within two (2) years of the date of sale.

IST MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY IST. These items sold, but not manufactured by IST (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. IST will provide the purchaser with reasonable assistance in making any claim for breach of these warranties.

LIMITATION OF LIABILITY

In no event will IST be liable for indirect, incidental, special or consequential damages resulting from IST supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of IST, or otherwise.

Report all accidents or "near misses" which involve IST products to:

- **Technical Assistance**

The following items are not covered under the IST warranty policy:

- Seal or packing replacement due to normal wears.

Defective material or workmanship is not considered normal wear.



SOLVENT RECYCLER SPECIFICATIONS

SPECIFICATIONS	MODEL SR-30	
	U.S. Units	Metric Units
Geometrical capacity of boiler	9 Gallons	37 Liters
Useful capacity of boiler	7 Gallons	30 Liters
Useful capacity of Vacuum tank	16 Gallons	64 Liters
Operating temperature	40°-180°C	104°-372°F
Solvent protection	Class 1, Div. 1, Group D	
Solvent temperature class	T2A – 280°C	
Absolute operating pressure	223 – 1,000 hPa	
	170 –760 mmHg	
	-0.223 – 1 bar	
Relative operating pressure	-776 – 0 hPa	
	-590 – 0 mmHg	
	-0.776 – 0 bar	
Time per cycle of distillation	3.5 – 4.5 Hours (estimate)	
Yield	85% – 97%	
Cooling system	Fan Cooled	
Boiler material / Vacuum tank	Stainless steel 304, 18 ga	
Condenser material	Copper (standard) / Stainless steel (optional)	
Voltage	220 V – 1 ph	
Absorbed power	2,82 KW	
Amperage	11.7 amps	
Thermic oil reservoir capacity	2.5 gallons / 10 Liters	
Dimensions (in inches)	37" length x 30" depth x 58" height	
Weight	260 Lbs.	118 Kg
Warranty	24 months	




SAFETY AND WARNING

GENERAL SAFETY

1. Carefully inspect the shipping carton for any signs of transport damage. The damage to the carton often indicates possibility of transport damage to the equipment inside.
2. Carefully remove your IST Solvent Recycler from the shipping carton.
3. Check your equipment immediately to ensure that it is free of transport damage. Report any transport damage to the carrier without delay for possible claim procedures. International Surface Technologies inc. is not responsible for damage to equipment after it leaves our warehouse.
4. Check the equipment list and compare it with the parts you have received. If any parts are missing, contact the supplier you purchased the equipment from.

Before operating the IST SOLVENT RECYCLER, read this Instruction Manual completely. All IST products are engineered and manufactured to the highest performance standards and have been subjected to detail testing before shipment from the factory.

DANGER AND WARNING LABELS

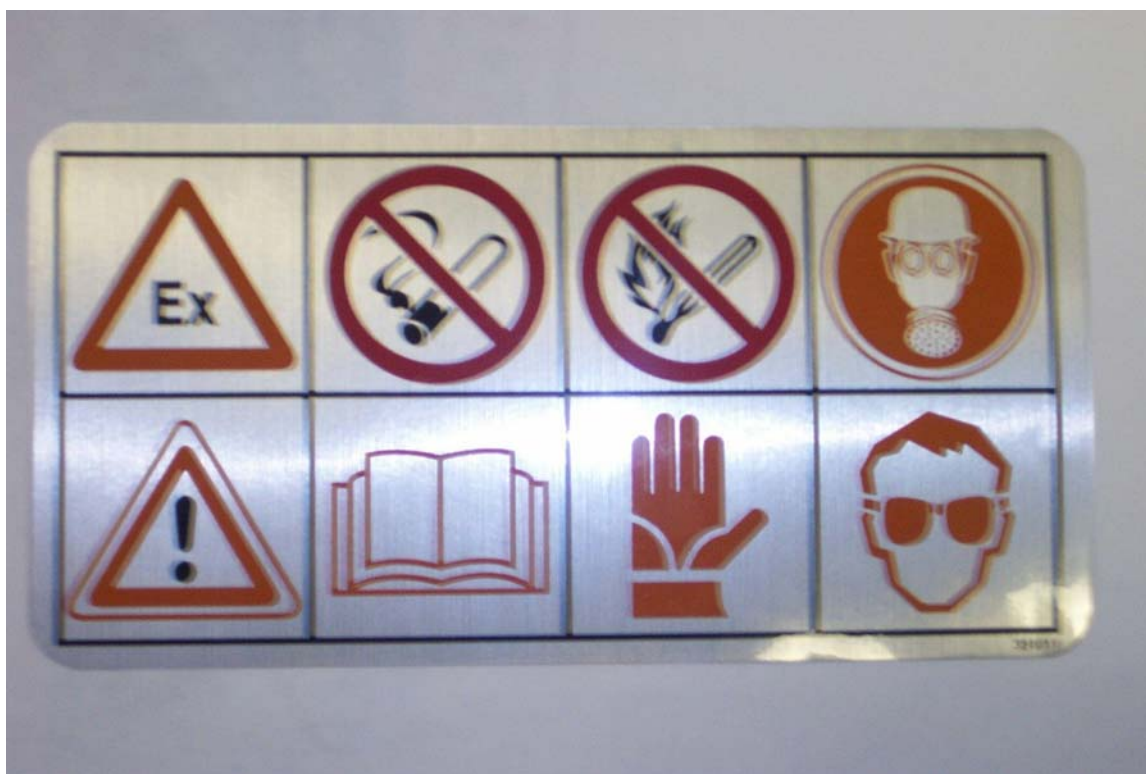

1. Presence of flammable vapors and solvents.
2. No smoking or metal grinding nearby.
3. Keep away from open flames.
4. Wear breathing mask
5. Observe warnings at all times.
6. Read the Instruction Manual carefully.
7. Wear solvent-proof rubber gloves.
8. Wear protective eyewear before use.



SAFETY AND WARNING (cont'd)

WARNING

« READ ALL INSTRUCTIONS » Failure to follow the SAFETY RULES identified by a BULLET (°) symbol listed BELOW and other safety precautions may result in serious personal injury.
« SAVE THESE INSTRUCTIONS »

GENERAL SAFETY RULES

- ° **KEEP WORK AREA CLEAN.**
- ° **KEEP CHILDREN AWAY.** Do not let visitors come in contact with the equipment. All visitors should be kept away from the work area.

PERSONAL SAFETY

- ° **GUARD AGAINST ELECTRIC SHOCK.** Prevent body contact with grounded surfaces, for example: pipes, radiators. Solvent resisting rubber gloves and non-skid footwear is recommended where damp or wet ground may be encountered. A ground fault circuit interrupter protected power line must be used for these conditions.
- ° **DRESS PROPERLY.** Do not wear loose clothing or jewelry. They can be caught in the moving parts. Wear protective hair covering to contain long hair.
- ° **USE SAFETY EQUIPMENT. WEAR SAFETY GOGGLES** or glasses with side shields.
- ° **STAY ALERT. USE YOUR COMMON SENSE.** Concentrate on what you are doing. Do not operate the unit when you are tired or under the influence of drugs.
- ° **DO NOT OVERREACH.** Keep proper footing and balance at all times.
- ° **BEFORE CONNECTING THE UNIT** be sure the power is the same as that specified on the nameplate of the Solvent Recycler. With power greater than that specified on the Solvent Recycler can seriously injure the user – as well as damage the Solvent Recycler.



UNIT USE AND CARE

- **DO NOT FORCE THE UNIT.** It will perform better and safer at the rate for which it was designed.
- **THE USE OF ANY OTHER ACCESSORIES** not specified in this manual may create a hazard.
- **DISCONNECT THE UNIT** when not in use, before servicing.
- **DO NOT ALTER OR MISUSE THE UNIT.** These units are precision built. Any alteration or modification not specified is misuse and may result in a dangerous situation.

Only trained repairmen should attempt (°) ALL REPAIRS, electrical or mechanical. Contact the nearest Becca repair service facility. Use only IST replacement parts, any other parts may create a hazard.

SAFETY RULES

- **THE OPERATOR MUST WEAR** protective solvent-proof rubber gloves to prevent contact between his hands and the products used for washing.
- **THE OPERATOR MUST WEAR** protective eyewear to prevent spatter from coming in contact with his eyes.
- **STAY ALERT** at the start of the wash cycle. Make sure the solvent is not «corrosive». Immediately stop the recycler and replace the solvent whenever you note signs of corrosion on the unit.
- **IF EYES COME IN CONTACT WITH SOLVENTS** rinse thoroughly with water.
- **BEFORE USING** the Solvent Recycler, make sure that all safety devices are in perfect operating condition.
- **BECOME FAMILIAR WITH THE CONTROLS** and their functions before commencing work.
- **BE CAREFUL** when you load or unload the solvent in the unit. Make sure you do not splash or spill the contents on the workshop floor.
- **THE OPERATOR MUST PERIODICALLY** check the level of the clean solvent contained in the collection pail to prevent it from overflowing.
- **DO NOT USE ELECTRICAL OR PNEUMATICAL TOOLS WITH THE UNIT. AVOID GASEOUS AREAS.** Do not operate portable electric tools in explosive atmospheres in the presence of flammable liquids or gases. Motors in these tools normally spark, and do not scrape or scratch the machine with metal objects; the sparks might ignite fumes.



SAFETY AND WARNING (cont'd)

- **DO NOT ALLOW FAMILIARITY GAINED FROM FREQUENT USE OF YOUR SOLVENT RECYCLER TO BECOME COMMONPLACE.** Always remember that a careless fraction of a second is sufficient to inflict severe injury.
- **DO NOT ALTER OR MISUSE THE UNIT.** Any alteration or modifications is a misuse and may result in serious personal injuries.
- **FIRE EXTINGUISHING SYSTEMS** must be installed in the same room or close to the unit in case of emergency. These appliances must be kept efficient and inspected every year by a certified person.
- **THE INSTALLATION SITE MUST PERMIT PERSONNEL TO EASILY AND QUICKLY MOVE AWAY FROM DANGER ZONES IN CASE OF AN EMERGENCY.**
- **DO NOT USE THE UNIT TO** wash or degrease objects designed to come in contact with food.
- **COMPLY WITH LAWS IN THE COUNTRY** where the Solvent Recycler is installed regarding the use and disposal of the products used to wash clean objects.

THINK SAFETY! SAFETY IS A COMBINATION OF THE OPERATOR'S COMMON SENSE, KNOWLEDGE OF THE SAFETY AND OPERATING INSTRUCTIONS AND ALERTNESS AT ALL TIMES WHEN THE UNIT IS BEING USED.



FLAMMABLE SOLVENTS

SOLVENT TYPE	Distillation Temperature		Temp. Class	Ignition Temperature		Seal	Condenser Type	
						Silicone	cop	s/st
Acetone	56	133	T2	535	995	A	A	A
Alcohol Amyl	145	293	T2			A		B
Alcohol Butyl	118	244	T2			A	A	A
Alcohol Ethyl	79	175	T2	362		A	A	A
Amyl Acetate	126-155	259-311	T2	375	707	A	A	A
Benzol (Benzene)	80	176	T-1	498	1040	A	B	B
Butanol (Butyl Alcohol)	118	244	T2	366	691	A	A	A
Butyl Acetate	128	262	T-2	370	698	A	B	A
Cabinol	65	149	T-2	385	725	A	B	A
Cellosolve Acetate	156	313	T-2	377	711	A	B	A
Cyclohexanol	162	324	T-2	300	572	A	B	A
Cyclohexanone	155	311	T-2	419	786	A	B	A
Dimethylformamide (DMF)	153*	307*	T-2	445	833	A	A	A
Ethyl Acetate	79	174	T-2	427	801	A	A	A
Ethyl Alcohol (Ethanol)	79	175	T-2			A	A	A
Ethyl Benzene	136	277	T-1	466	871	A	A	A
Ethyl Glycol Acetate	156	313	T-2	377	711	A	A	A
Iso Amyl Acetate	125-155	257-311	T-2	375	707	A		A
Iso Butyl Acetate	104-119	219-246	T-2	420	788	A		
Iso Butyl Alcohol	111	232	T-2	430	806	A		
Iso Propane	83	181	T-2	400	752	A	B	A
Iso Propyl Acetate	89	192	T-2	460	860	A	A	A
Iso Propyl Alcohol	83	181	T-2	400	752	A		A
Iso Propyl Glycol	143	289	T-2	345	653	A		
Lacquer Solvents	140	284	T2	535	995	A	A	A
Methyl Acetate	58	136	T-2	454	850	A	B	A
Methyl Cellosolve Acetate	156	313	T-2	377	711	A	B	A
Methyl Ethyl Ketone (M.E.K.)	80	176	T-1	530	986	A	A	A
Methyl Glycol Acetate	137-152	278-305	T-2	380	716	A	A	A
Methyl Isobutyl Ketone (M.I.B.K.)	117	243	T-1	459	858	A	B	A
N. Butyl	118	244	T2	366	691	A		A
Pentanol	138	280	T2	327	621	A		A
Propanol	98	208	T2	371	700	A		A
Propyl Alcohol	98	208	T2	371	700	A	A	A
Propyle Acetate	101	214	T2	450	850	A	A	A
Paint Thinner	140	284	T2	535	995	A	B	B
Sec. Butyl Alcohol	101	214	T2	390	734	A		A
Toluol	110	231	T1	480	905	A	A	A
Heavy Nafta	150-175*	302-374*	T2	349	484	A	A	A
Varsol	150*	302*	T2	351	487	A	A	A
Xylol (Xylene)	144*	291*	T1	463	907	A	A	B



NON-FLAMMABLE CHLORINATED SOLVENTS

SOLVENT TYPE	Distillation Temperature		Temp. Class	Ignition Temperature		Seal	Condenser Type	
	°C	°F		°C	°F	silicone	cop	S/st
1,1,1, Trichloroethane-(Methyl Chloroform)	74*	165*				A		A
n-Propyl Chloride	47*	117*				A		A
Isopropyl chloride	40*	104*				A		A
Methylene chloride	40*	106*				A		A
Dichloroethylene	37*	99*				A		A
Ethylene dichloride	84*	183*				A		A
Monochlorobenzene	133*	273*				A		A
Propylene dichloride	98*	208*				A		A
Chloroform	61*	142*				A		A
Trichloroethylene	92*	198*				A		A
Trichloroethane	115*	239*				A		A
Ortho dichlorobenzene	182*	361*				A		A
1.2.3. trichloropropane	158*	317*				A		A
Carbon tetrachloride	78*	172*				A		A
Perchloroethylene	122*	254*				A		A
Tetrachloroethane	147*	297*				A		A

WARNING

The information and data set forth in this catalog or the information disclosed by a representative is for your general information only. Many factors influence the resistance of materials to corrosion, such as temperature, concentration, aeration and contaminants.

A – Recommended
* – Vacuum distillation only

B – Not Recommended
Blank – Information not available



VACUUM DISTILLATION

The boiling temperature of the solvents reported on pages 9-10 measured for atmospheric pressure operation of 1,000 hPa (760 mm Hg).

It is well known that by reducing the pressure, the boiling temperature of any substance is reduced.

When vacuum is created inside the distillation appliance, the boiling temperature is considerably reduced.

With Units SR30 & SR30-V, operating with vacuum, the distillation temperature is reduced about 30%.

Vacuum distillation is recommended in the following cases:

1. When processing solvents with a boiling temperature greater than 70°C (158°F).
1. Compulsory when processing solvents with a boiling temperature greater than 60°C (140°F). Operating at a higher temperature can create problems on the cover seal.
2. When processing solvents with ignition point too close to their boiling temperature can create a hazard or the solvent can degenerate and become an acid base and therefore cannot be re-used.
3. When processing chlorinated solvents.

Atmospheric pressure distillation allows only a partial recovery of these solvents; at the end of the process the residues will still contain 20% of solvents.

This occurs due to the fact that as long as the distillation process takes place, the percentage of oil in the boiling solvent increases, so does the boiling temperature.

These solvents have a specific critical temperature which once exceeded, provoke the decomposition of the solvents, causing the formation of hydrochloric acid with the consequent acidity of the product, it will be impossible to re-use it. Operating with atmospheric pressure, once critical temperature is reached will distill only 80% of the solvent. With vacuum distillation it is possible to achieve a yield of 100% without reaching the critical temperature.



VACUUM DISTILLATION (cont'd)

Examples

Product to be distilled:


Perchloroethylene

Distillation temperature at atmospheric pressure: 121°C


Distillation temperature at vacuum condition (223 hPa): 84°C

Critical temperature of decomposition: 150°C


A. Boiling range of clean perchloroethylene at atmospheric pressure: 1,000 hPa.

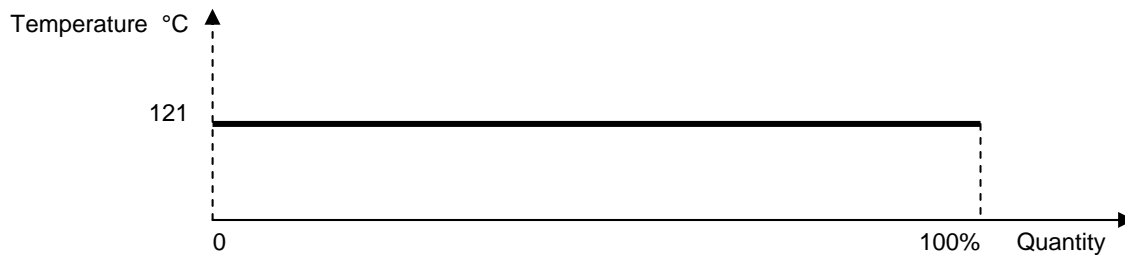

B. Boiling range of clean perchloroethylene at vacuum condition: 223 hPa.

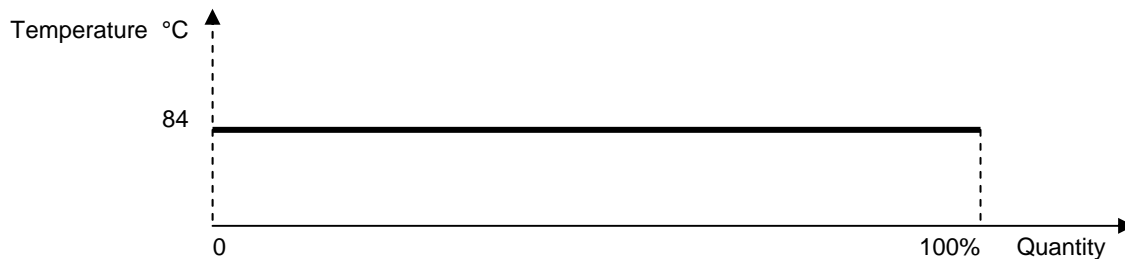


C. Boiling range at atmospheric pressure (1,000 hPa) of a mixture of 90% perchloroethylene + 10% of oil.

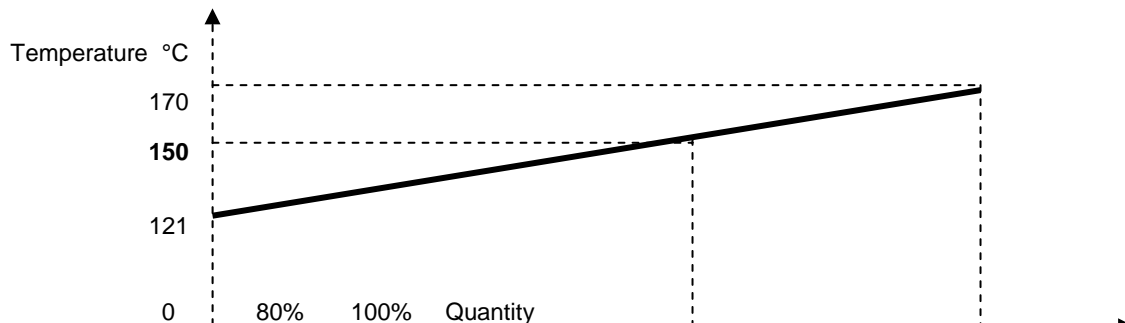

VACUUM DISTILLATION (cont'd)



D. Distillation temperature at vacuum condition (223 hPa) of a mixture of 90% perchloroethylene + 10% of oil.

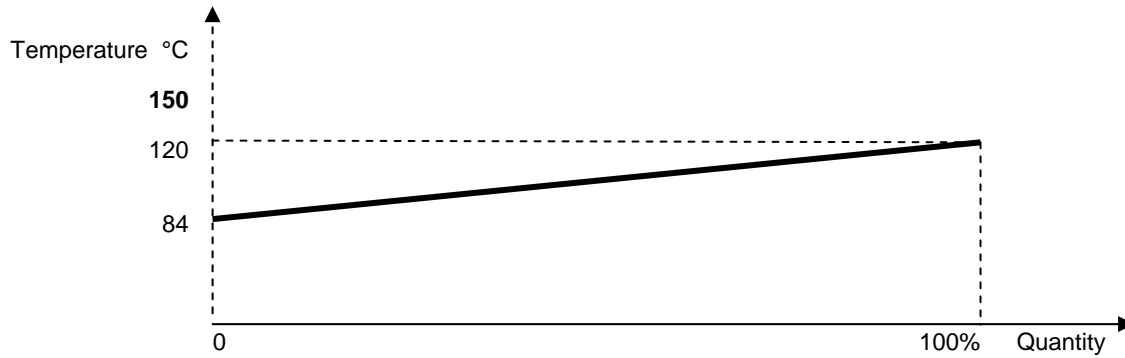

GRAPHIC (A) – (B)

The distillation temperature of a clean solvent remains the same until the process of the whole cycle is complete.

GRAPHIC (C) – (D)

The distillation temperature of the contaminated solvents increases during the process; this variation depends on the degree of contamination and on the type of contaminating substances.

GRAPHIC (C)

Once a temperature of 150°C (302°F) is reached, which is the critical non-supportable temperature, only 80% of perchloroethylene will be recovered.

GRAPHIC (D)

Operating with vacuum condition, 100% of perchloroethylene will be recovered when set at 120°C (248°F) and very far from the critical temperature of 150°C (302°F).

When distilling chlorinated solvents, the vacuum distillation is indispensable; this type of process is also necessary for minimal quantities of contaminants because of two specific reasons:

1. Yields 100%.
2. If the residual oil is contaminated with more than 2% of solvent, those oil waste-recycling companies authorized for the waste collections will not accept it.



VACUUM DISTILLATION – OPERATING PRINCIPAL DRAWING

Before reading this section, it is compulsory to read the previous section regarding the distillation at atmospheric pressure.

Unlike what occurs during atmospheric distillation, the distillation unit and the distillate collection tank are a single body.

A pneumatic vacuum generator joined at the solvent recovery tank provides the creation of the vacuum circuit.

Boiler Condenser Tank

The vacuum generator is fed with compressed air with a pressure of 70-100 P.s.i. with a maximum negative pressure of -27 P.s.i., -590 mm Hg.

NOTE: WITH VACUUM DISTILLATION IT IS POSSIBLE TO DISTILL SOLVENTS WITH DISTILLATION TEMPERATURE HIGHER THAN 60°C (140°F) AT ATMOSPHERIC PRESSURE.

For example, distilling at vacuum condition the Acetone, which has a distillation temperature of 56°C (133°F) at atmospheric pressure, will reach a boiling point of 39°C (101°F). Considering that the condenser is by air, if the temperature result is higher than 20°C (70°F) you will obtain a partial condensation of the solvent with an emission of Acetone vapor in the air.

OPERATING METHODS

DISTILLATION : AT ATMOSPHERIC PRESSURE
DRYING :

When processing solvents with distillation temperature lower than 60°C (140°F), polluted with liquid products.

DISTILLATION : AT ATMOSPHERIC PRESSURE
DRYING : AT VACUUM CONDITIONS

When processing solvents with distillation temperature lower than 60°C (140°F), polluted with solid products.

DISTILLATION : AT VACUUM CONDITIONS
DRYING :

In this case the process of the solvent reducers distillation temperatures between 60°-200°C (140°-392°F), and polluted with liquid products.



OPERATING METHODS (cont'd)

DISTILLATION : AT VACUUM CONDITIONS
DRYING : AT VACUUM CONDITIONS

In this case the process of the solvent reducers, with distillation temperatures between 60°-200°C (40°-392°F), and polluted with solid products.

INSTALLATION (At Vacuum Conditions)

1. Connect the solenoid inlet to the compressed air circuit with a nylon tube of 3/8 inches.

PRESSURE OF COMPRESSED AIR: 4 BAR
CONSUMPTION OF AIR: 32 L/MIN

2. Connect the solenoid outlet to the vacuum generator with a plastic tube of 3/8 inches.

3. Connect the distillate collection tank to the vapor condenser utilizing a rubber anti-solvent tube, avoiding any bend downwards.

4. When distilling flammable solvents, connect the distillate container to the grounding clip.

5. Turn off the distillate-unloading valve.

STARTING OPERATIONS

NOTE: During vacuum distillation some solvents foam with a consequent pollution of the distillate and vapors may leak from the cover.

The problem can be eliminated as follows:

- Utilize anti-foam discs.
- Reduce about 20% of the loading of solvent to be distillate.
- Reduce the compressed air pressure at the vacuum pump. In that way the vacuum will be reduced.
- Reduce the working temperature.
- Wait at least **48 hours** after utilizing the solvent before starting the next distillation.


When filling up, pay attention not to pour solvent into the vapor manifold. The first solvent can come out dirty.



VACUUM INSTALLATION



VACUUM INSTALLATION

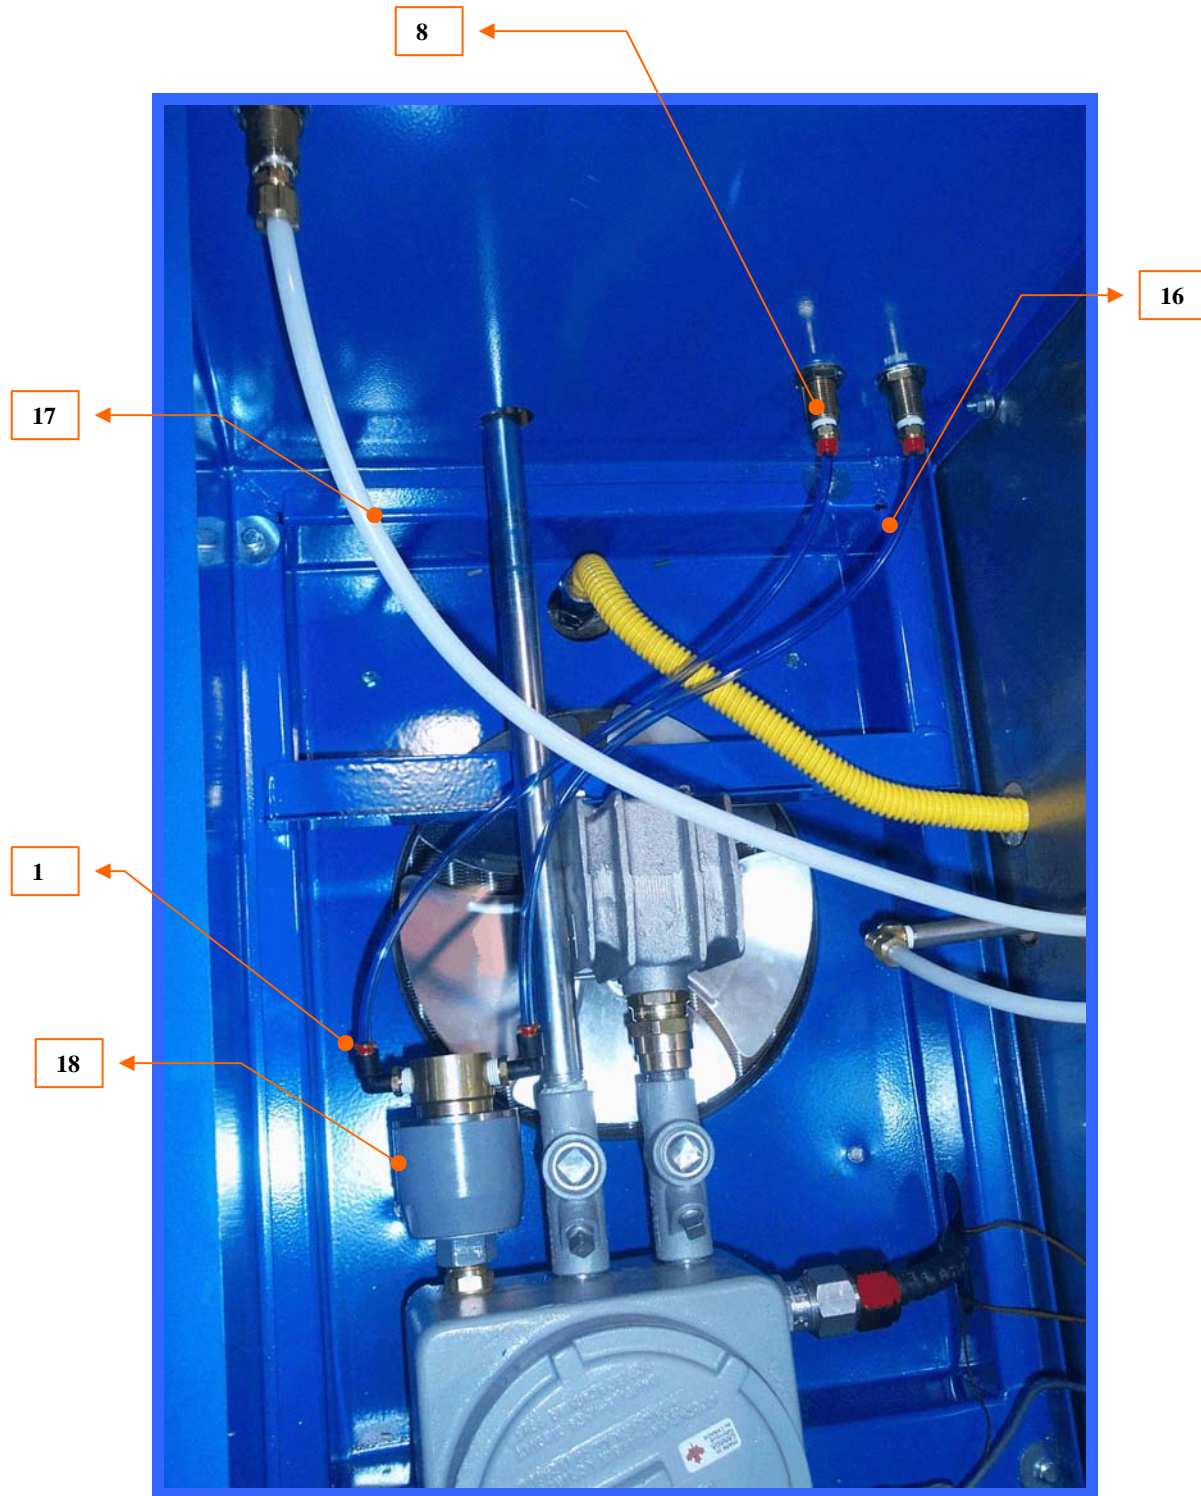

SPARE PARTS NUMBERS FOR VACUUM

INDEX	PART #	DESCRIPTION	QUANTITY
1	324022	ANTI-FOAM DISK FOR UNIT:	Optional
2	300012	BAG RETAINING RING	1
3	300002	PLASTIC BAG	
4	324013	FILTER & REGULATOR	1
5	324014	AIR GAUGE: 0 – 160 P.s.i.	1
6	323125	CLOSE NIPPLE: 1/4	3
7	323130	COMPRESSION FITTING	1
8	324558	PUSH IN FITTING	1
9	323006	BALL VALVE 1/4	
10	324002	VACUUM GENERATOR	1
11	324559	PUSH IN FITTING	1
12	324001	VACUUM GAUGE	1
14	324567	BRASS CROSS	1
15	323131	COMPRESSION FITTING	2
16	324571	POLYURETHANE TUBING BLUE	5
17	324512	NYLON TUBING	5
18	324003	SOLENOID VALVE	1
19		PLUG 1/4 STAINLESS STEEL	1
20		Ball valve 1/4	1



IMPORTANT ADVICE

1. Some solvents during the boiling phase create such a quantity of foam that a correct separation of the solvent from the polluting product is not possible; in fact, in this case, the distillate will still be dirty. To avoid this inconvenience, it will be necessary to obtain an anti-foam kit supplied as an option.

324022 ANTI-FOAM KIT FOR: MODEL SR-6

2. Pay the utmost attention while the residue is drying; some polluting products with an increase of temperature tend to carbonize with a considerable discharge of smoke from the apparatus.

IN CASE THIS OCCURS, IMMEDIATELY PRESS THE START / STOP KEY TO STOP THE CYCLE.

In this case it is not possible to proceed to drying at atmospheric pressure; the problem may be solved by proceeding to the distillation phase at atmospheric pressure and to the phase of drying under vacuum; this technique will allow you to operate at a much lower temperature.

3. Opening the cover **one hour** before the distillation cycle is complete will cause the gasket to swell.
4. Do not rotate and shake the unit once loaded or when operating.
5. The cover acts as a safety valve. In case vapors come out of the cover stop the unit **IMMEDIATELY** and consult the table on page 20, "**Defects, Causes and Remedies**".

DO NOT MISHANDLE THE COVER LOCKING SYSTEM OR LOCK THE COVER IN ORDER TO AVOID LEAKING.

6. Clean the diathermic oil expansion vessel only with a "wet" rag to avoid generating sparks.



DEFECTS, CAUSES AND REMEDIES

Vacuum

DEFECTS	CAUSES	REMEDIES
No vacuum production.	<ul style="list-style-type: none"> - Lack of compressed air. - Lack of compressed air circuit. - Distillate unloading tap turned on. - The rubber tube of connection to distillate container is not perfectly connected. - Rubber tube deteriorated. - Lack of distillate level control. - The cover does not have a perfect seal. - Cover gasket deteriorated. - Solenoid defected. - Vacuum pump damaged. 	<ul style="list-style-type: none"> - Adjust the air pressure. - Check the connection. - Turn off the distillate-unloading tap. - Check the connection towards the condenser and connection on rapid clutch. - Change the rubber tube. - Check the connections. - Place the cover correctly on the shoulder of the boiler. - Replace the gasket. - Replace the solenoid. - Change the vacuum pump.
During the distillation distillate comes out dirty.	<ul style="list-style-type: none"> - Solvent foams. 	<ul style="list-style-type: none"> - Use anti-foaming discs, see page 18. - Load less quantity of solvent. - Reduce working temperature. - Reduce the compressed air feeding. - Wait at least 48 hours after utilizing the solvent before starting the next distillation.
During drying distillate pigments.	<ul style="list-style-type: none"> - Draws polluted products. 	<ul style="list-style-type: none"> - Separate the distillation phase than the drying ones. At the end of the distillation discharge the distillate tank and proceed to dry. At the end of drying wash the tank.



For more information, prices or technical assistance,
contact your local IST distributor or call / fax our
Consumer Information Numbers:

Tel.: (450) 629-6678 Fax: (450) 629-3822
(800) 361-1185

www.canablast.com
e-mail : info@canablast.com



